


# MULTIPLE IP CAMERAS SETUP GUIDE


## START HERE

### IMPORTANT:

Check power and voltage to prevent damage. Please use only 12VDC 1000mA or POE to power the camera. In order to program the IP camera, you need a computer connect to the same network as the camera.

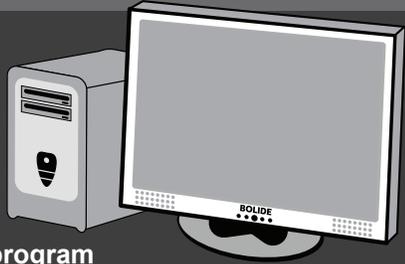


## Connection Diagram

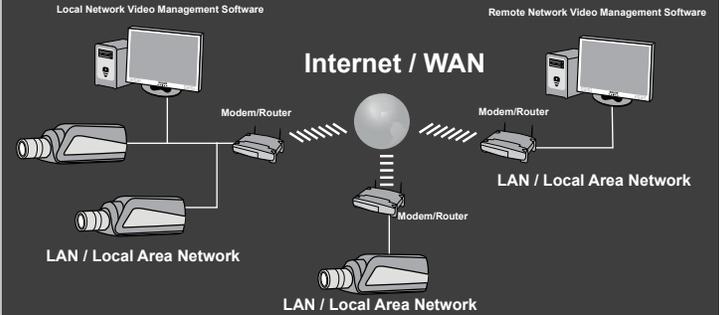

## EASY SETUP STEP 1 - 2 - 3

- 1 Plug in the power to the camera 12VDC or POE. Plug in the Ethernet cable to the camera and connect to a network hub or switch.

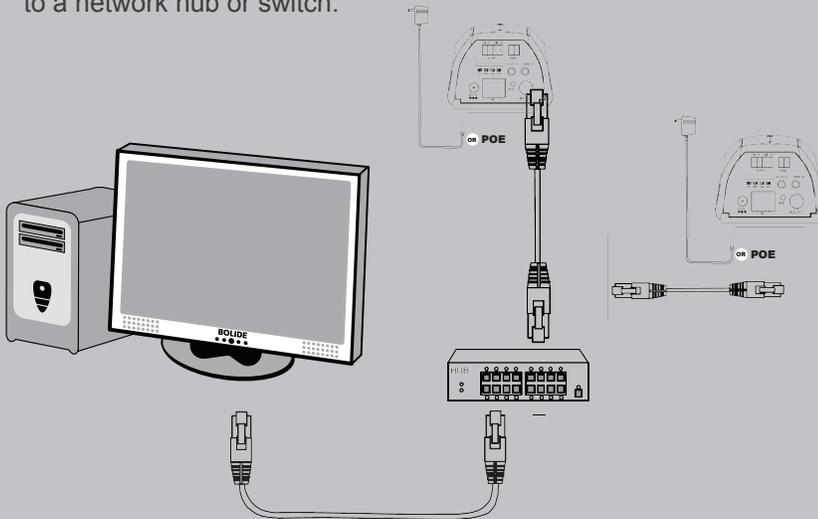

- 2 When you have cameras and computer connected to the network, log into each camera and assign different IP address to each individual camera.

IP Camera #1:  
Address: 192.168.0.120  
IP Camera #2:  
Address: 192.168.0.121



- 3 In order to view multiple cameras, simply install the Network Video Management Software (NVMS) to your PC. NVMS will automatically detect the cameras on the network. After initializing, simply double click the camera IP to connect to the camera.

\*Note: NVMS allows up to 128 cameras connected together for recording. For live view, the limitation is 36 cameras on the screen at the same time.



## Need More Help?

For information about features, please refer to the user manual for example settings and definitions. Additional product information can also be found in the Product Manual on the CD. Please feel free to give us a call or simply log on to <http://www.bolideco.com> for more information and support.



Bolide Technology Group  
is a ISO 9001:2008 Certified Corporation